

MAINTAINING YOUR EUROSCREEN PROJECTION SCREEN SURFACE

Please Note: Cleaning should be undertaken only when needed and with great care. Not all stains can be removed. Please take care to protect your screen from damage to minimize the need for these procedures.

ARCTIQ, ASTRANOVA, GREYLIGHT, FLEXGREY, FLEXREAR & FLEXWHITE

Gently clean the screen with a cloth with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a clean, soft, disposable cloth. Gently wipe the surface, completely rinse the spot or entire surface with clear water and wipe dry afterwards. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax.

XPERT & REACT 3.0

Xpert & ReAct-fabric versions can be cleaned with a clean, soft, lint free cloth to remove dust from the surface. Remove soil marks with a dry cloth. Do not use solvent or abrasives. Contact Enyroom for stronger cleaning needs.